

FREEDOMLINK+ PG224 USER MANUAL



www.freedomlinkplus.com

Thank you for your purchase!

Before Getting Started

- 1. Make sure you have a good 4G signal
- 2. Make sure the SIM Card is securely inserted.
- 3. This SIM card can not be used in any other device and will cause the SIM card to be locked.
- 4. Charge the battery 12-14 hours for the first initial charge.

Precautions

- Refer service to qualified technicians only
- Do not disassemble or modify the transceiver for any reason.
- Do not expose the transceiver under direct sunlight for a long time or extremely hot conditions.
- Do not place the radio on an unstable surface.
- Keep the radio out of dust, moisture, and water.
- Do not operate the radio or charge the battery under explosive conditions.

Items Included with Your Purchase

- 1. Li-Ion Battery
- 2. Wrist Strap
- 3. Antenna
- 4. SIM Card
- 5. Belt Clip
- 6. 1 Year Airtime
- 7. 1 Year Warranty On the Radio
- 8.6 Month Warranty on Accessories



Product Features

Power/Volume Knob

- Turn the knob clockwise to turn on/increase volume
- Turn the knob counterclockwise to turn off/reduce volume

PTT Key

- Press and hold the PTT key to initiate a call and the red indicator light will remain on
- Release the PTT key to return and receiving state and the green indicator light will remain on during the receiving process

Member Key

Quickly enter member selection

Menu Keys

• Short press menu key to enter menu list, Long press menu to key to activate/close the keyboard lock

Menu Keys Continued

- Group Select: Select a group to initiate group calls
- Member Select: Select a member to initiate a private call

Note: If there is no operation in 30 seconds, the single call status will be automatically exited. Either party can manually exit single call by pressing the back button and return to the original group call status.

Using An Earpiece

Open the protective cover, insert the compatible earpiece. Press the PTT key on the earpiece and initiate a call. Release the PTT key to enter a receiving state.

Charging The Battery

1. Using the original adapter and USB cable, plug that into the bottom C-Style socket in the bottom of the radio. The indicator light at the bottom of the radio will turn red when charging.

Common Functions

Group Call

Just like a regular two way radio, when you speak in a group, all other people in this group will receive you call.

Single Call

When you enter the single call mode, you can choose the users of the current group online and let them enter the single channel mode with you. When one of you quits the single call mode, the two parties will exit the single call mode at the same time and return to the original group.

Power Save Mode

High efficiency, Power save (default), and Super power save mode

Automatic Screen Shutdown

If there is no button operation within the set time the radio will automatically shut down the screen

LED Indicators

Normal: Green flashing slowly

Transmitting: Constant Red

Receiving: Constant Green

Programming

Please contact us at info@freedomlinkplus.com for any programming changes you require. Programming changes can be made over the air. Examples of programming changes:

Names (Between 2-11 Characters)

Groups

Warranty

Thank you for your interest in the products and services of FreedmonLINK+. This Limited Warranty applies to physical goods, and only for physical goods, purchased from FreedomLINK+ (the "Physical Goods").

What does this limited warranty cover?

This Limited Warranty covers any defects in material or workmanship under normal use during the Warranty Period. During the Warranty Period, FreedomLINK+ will repair or replace, at no charge, products or parts of a product that proves defective because of improper material or workmanship, under normal use and maintenance.

What will we do to correct problems?

FreedomLINK+ will either repair or replace the Product at no charge, using new or refurbished replacement parts.

How long does the coverage last?

The Warranty Period for Physical Goods purchased from FreedomLINK+ is 1 year from the date of purchase. A replacement Physical Good or part assumes the remaining warranty of the original Physical Good or 1 year from the date of replacement or repair, whichever is longer. Accessories are 6 months.

What does this limited warranty not cover?

This Limited Warranty does not cover any problem that is caused by: ● conditions, malfunctions, or damage not resulting from defects in material or workmanship

What do you have to do?

To obtain warranty service, you must first contact us to determine the problem and the most appropriate solution for you.



405 N. Hastings Pl. Eau Claire, WI 54703 (715)832-6763info@freedomlinkplus.com www.freedomlinkplus.com